TOP AND CABINET PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

AUTOMATIC
WASHER

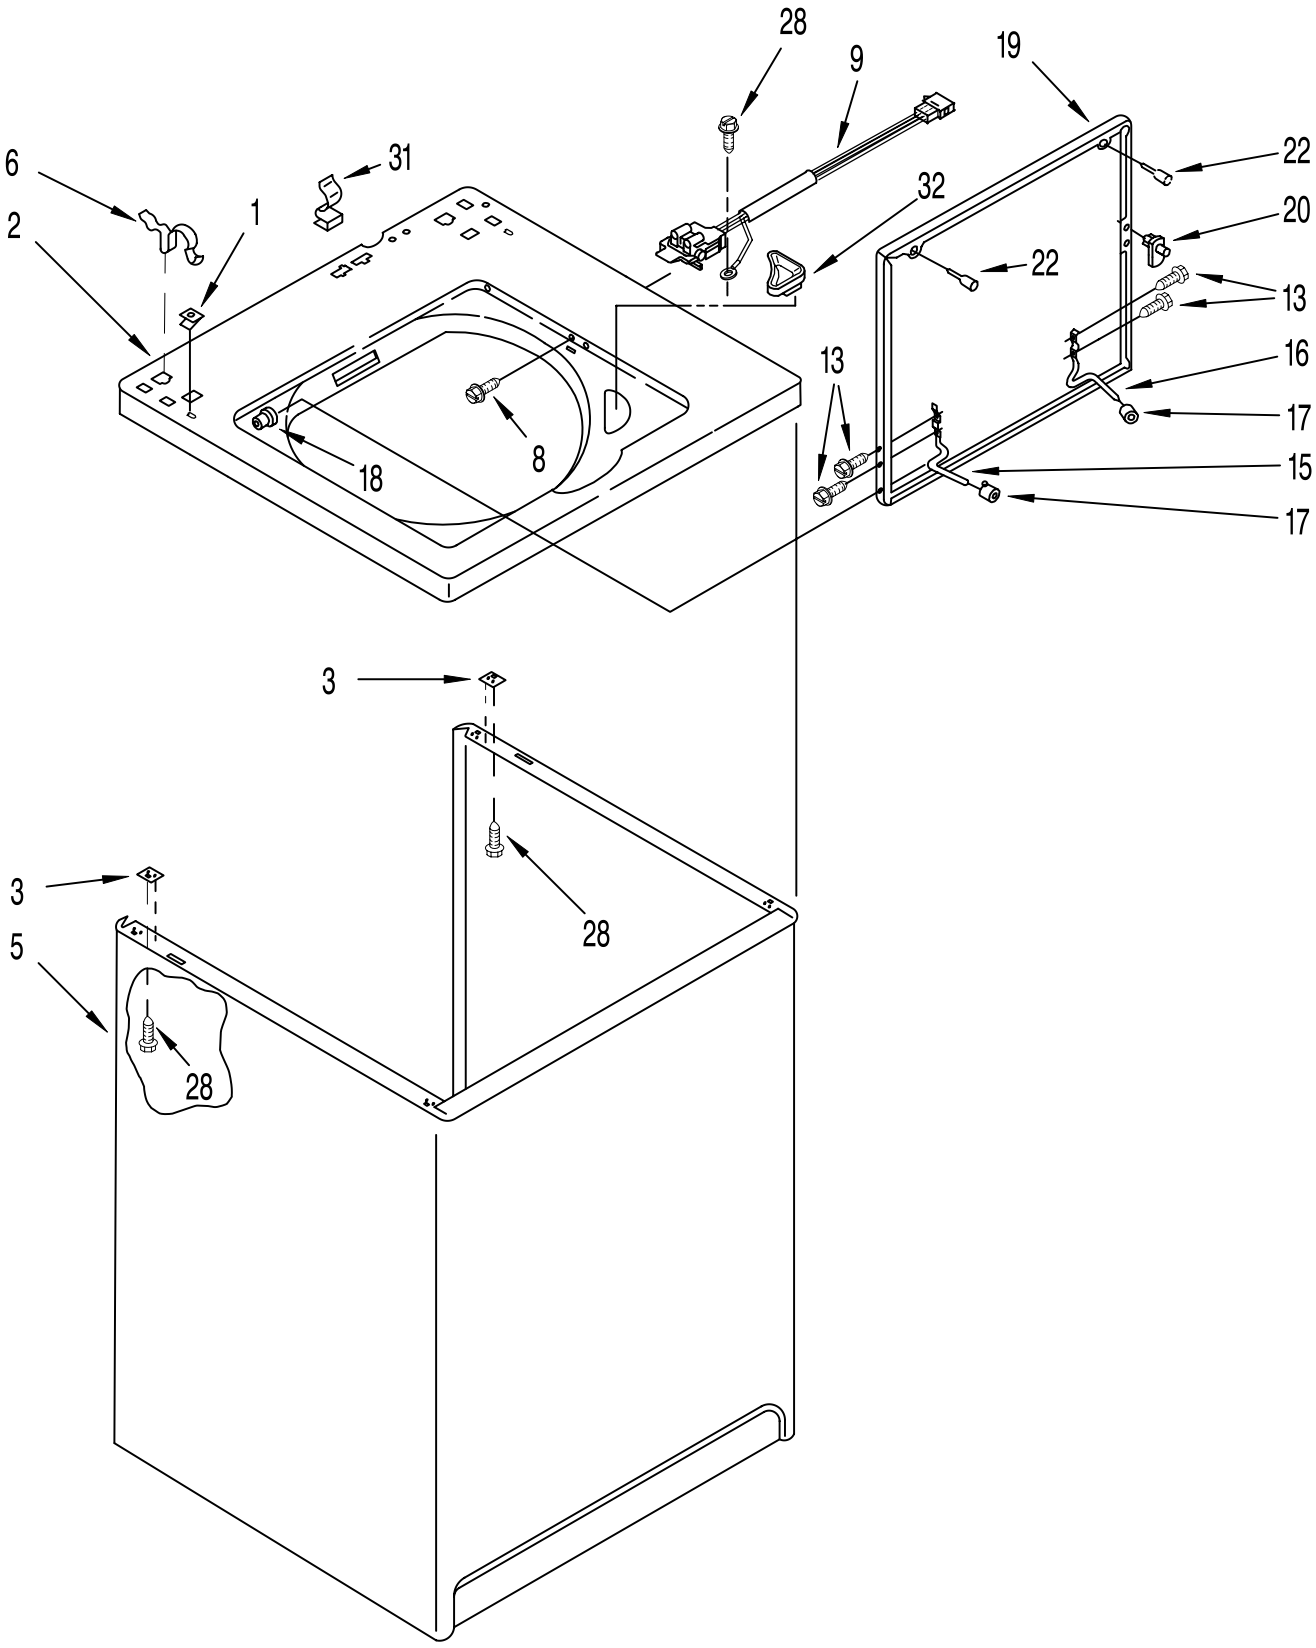

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CABINET PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

Illus. No.	Part No.	DESCRIPTION
1	357213	Nut, Push−In (2)
2		Top
	3949476	For White Model
	3949477	For Almond Model
3	62750	Spacer, Cabinet To Top (4)
5		Cabinet
	63424	For White Model
	63425	For Almond Model
6	62780	Clip, Top & Cabinet & Rear Panel (2)
8	3356311	Screw & Washer, Lid Switch (2)
9	3949237	Switch, Lid
13	3351355	Screw, Lid Hinge Mounting (4)
15	54584	Hinge, Lid (L.H.)
16	54583	Hinge, Lid (R.H.)
17	19119	Bumper, Lid Hinge
18	21258	Bearing, Lid Hinge (2)
19		Lid
	3352718	For White Model
	3352719	For Almond Model
20	358684	Strike, Lid Switch
22	93770	Bumper, Lid (2)
28	384435	Screw, 10−16 x 1/2 (4)
31	90016	Clip, Harness
32	3362952	Dispenser, Bleach

CONTROLS AND REAR PANEL PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

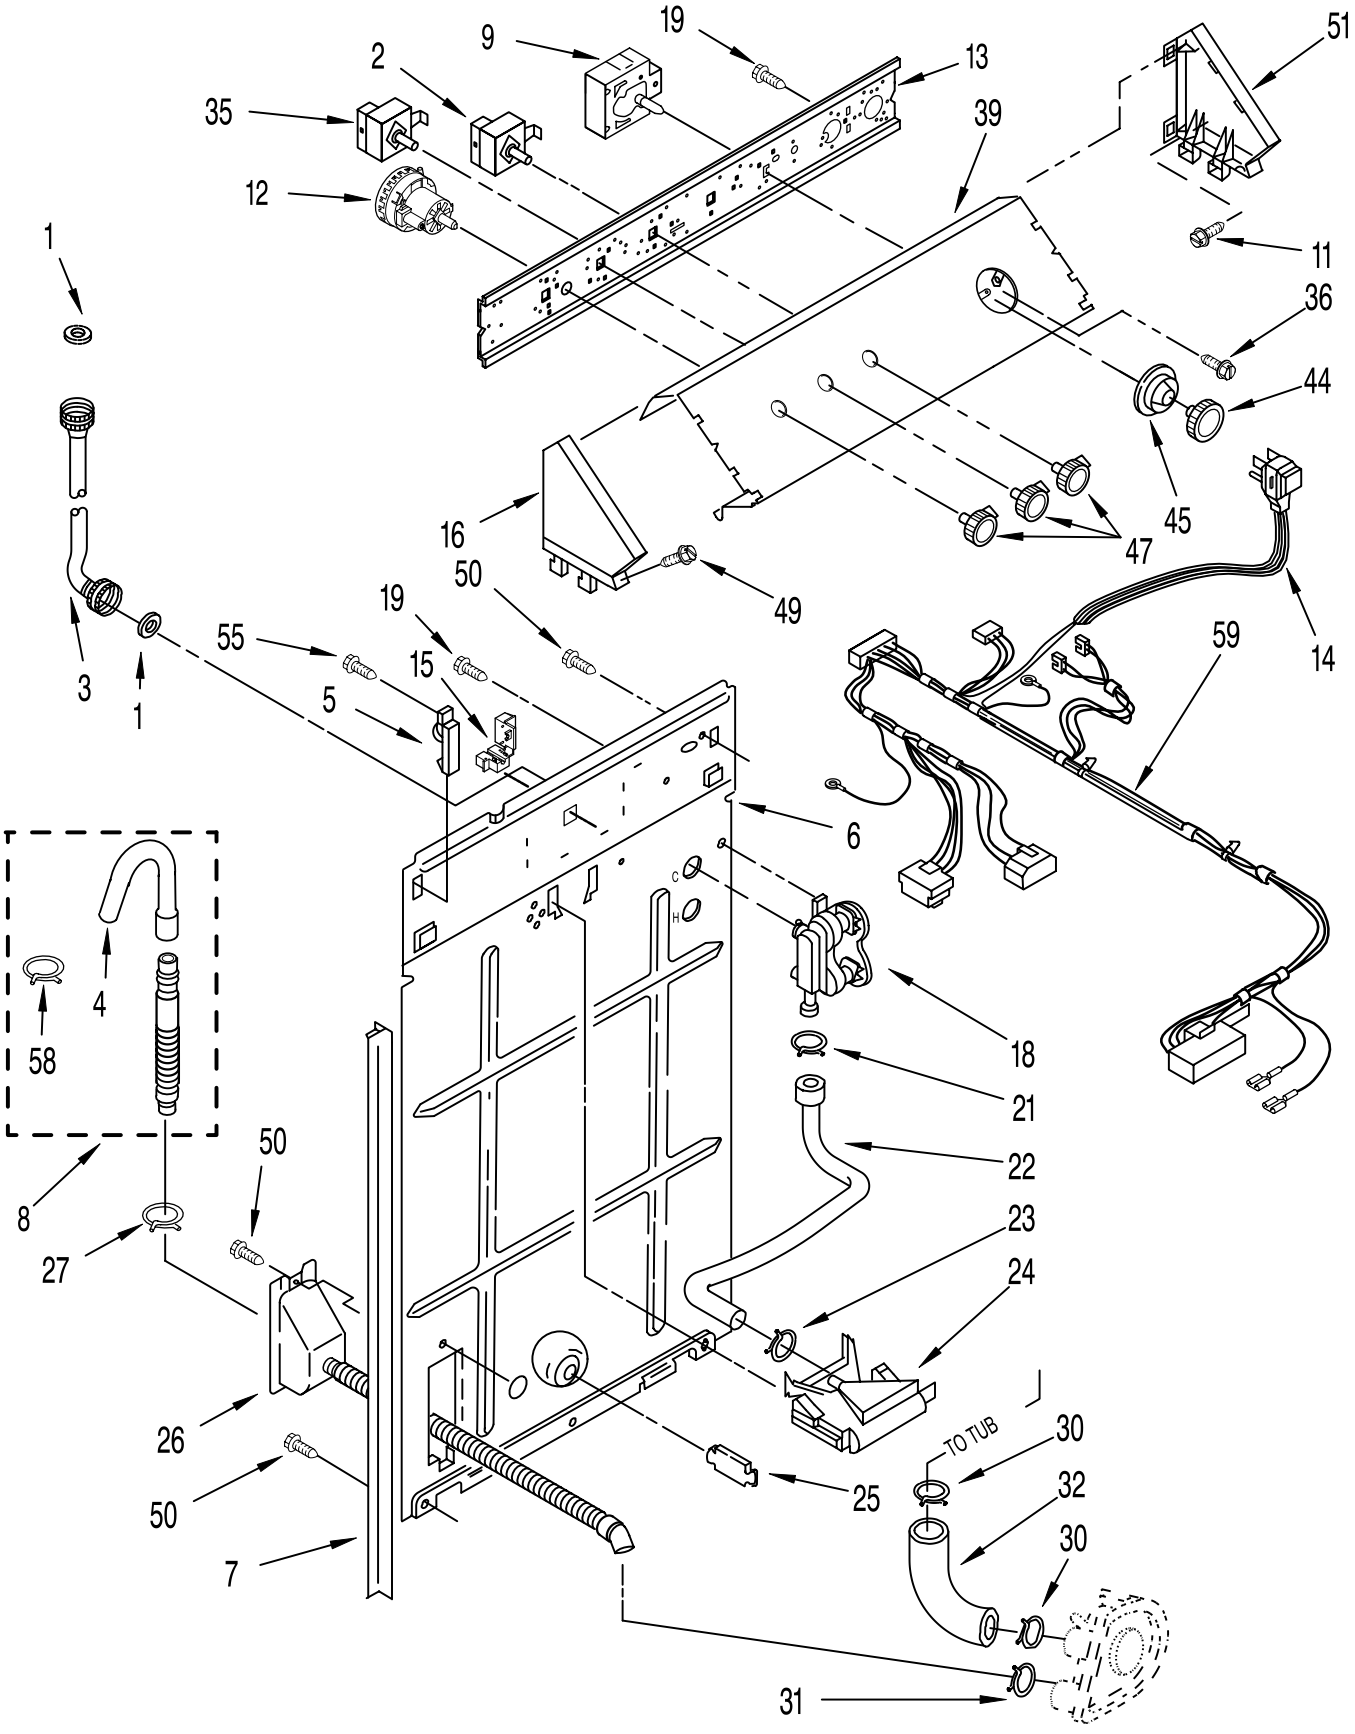

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL AND REAR PANEL PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

Illus. No.	Part No.	DESCRIPTION
1	16123	Washer, Water Inlet Hose (4) (1−1/16 x 5/8)
2	3949180	Switch, Cycle Modifier
3		Hose, Water Inlet (2)
	3949368	(Blue Coupler)
	3949369	(Red Coupler)
4	3357027	Nozzle−Drain Hose
5	387402	Hinge, Console (2)
6	3357978	Panel, Rear
7	62747	Pad, Rear Panel
8	3951609	Hose, Drain (4 ft.)
	661577	Hose, Drain (9 ft.) (Not Included)
	3357090	Extension Drain Hose (21 Inches.) (Not Included.)
9	3949208	Timer, Control (60 Hz.) (Motor Not A Service Part)
11	90767	Screw 8A x 3/8
12	3366846	Switch, Water Level
13	3948608	Bracket, Control
14	3949248	Cord, Power (Power Cord Only Without Harness)
15	3949468	Strain Relief, Power Cord
16		Cap, End (L.H.)
	3358528	For Designer White Model
	3358529	For Designer Almond Model
	3358531	For White Model
18	3360392	Valve, Water Mixing
19	90864	Screw, 10−24 x 3/8 (2)
21	370451	Clamp, Hose 272846 (Alt.) 353367 (Alt.)
22	3357328	Hose, Vacuum Break
23	371503	Clamp, Hose
24	3347034	Break, Vacuum
25	63290	Support, Rear Panel
26	3361805	Hose−Corrugated Assy.
27	3366912	Clamp, Hose
30	371502	Clamp, Hose
31	660628	Clamp, Hose 272858 (Alt.) 370447 (Alt.) 353097 (Alt.)
32	62731	Hose, Pump To Tub
35	3949184	Switch, Water Temperature
36	3400808	Screw, Timer Mounting (8−18 x 5/16)
39		Panel, Console
	3948271	For Designer White Model
	3948272	For Designer Almond Model
	3948273	For White Model
44		Knob, Timer
	3948580	For Designer White Model
	3948582	For Designer Almond Model
	3948579	For White Model
45		Dial, Timer
	3948587	For Designer White Model
	3948588	For Designer Almond Model
	3948586	For White Model
47		Knob, Control
	3950759	For Designer White Model
	3950760	For Designer Almond Model
	3950757	For White Model
49	388326	Screw, 8−18 x 1.25 (Panel to Top)
50	62863	Screw, 10−16 x 3/8
51		Cap , End (R.H.)
	3358513	For Designer White Model
	3358514	For Designer Almond Model
	3358516	For White Model
55	3357011	Screw, 10−16 x 1/2
58	3366913	Clamp, Drain Hose
59	3950998	Wiring, Harness (Includes Power Cord) (For Detail See Page 9 & 10) Also See Clips.

AGITATOR, BASKET AND TUB PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

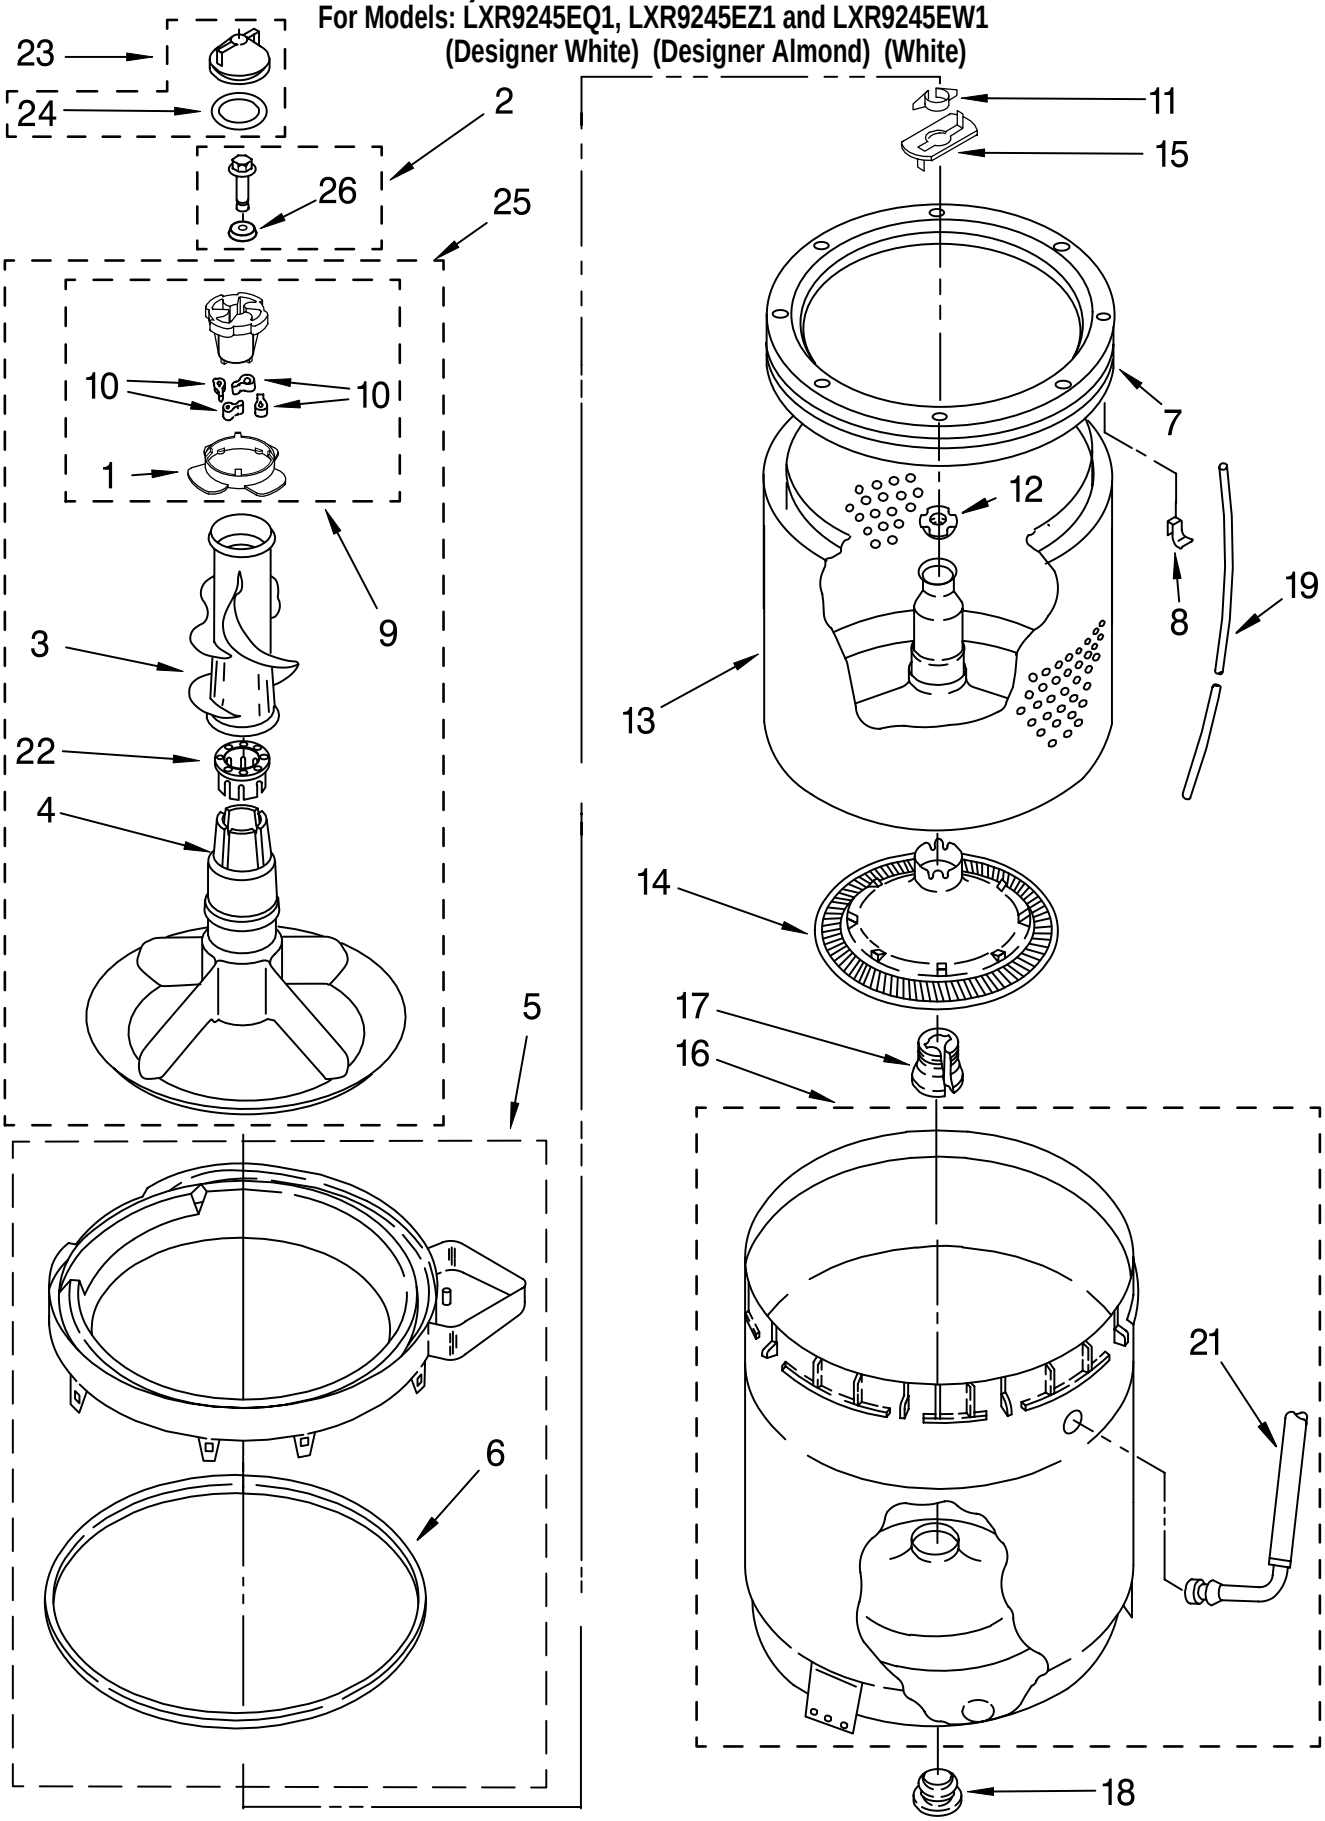

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

Illus. No.	Part No.	DESCRIPTION
1	3363661	Bearing−Driven Cam
2	358237	Screw & Washer (5−16−24 x 1)
3	3349019	Clothes Mover
4	3350830	Agitator
5	3360611	Tub Ring & Gasket
6	3359586	Gasket, Tub Ring
7	387868	Balance Ring
8	387867	Clip, Balance Ring (8)
9	3363663	Cam Driven
10	3366877	Dog, Agitator Clutch
11	3354845	Clip−Agitator
12	21366	Nut, Spanner
13	3363506	Basket
14	3361948	Filter, Plate
15	3355921	Washer−Agitator
16	63039	Tub
17	389140	Block, Basket Drive
18	383727	Gasket, Centerpost
19	3347780	Hose, Pressure Switch
21	3948705	Hose, Bleach
22	3350389	Spacer, Thrust
23	3354733	Cap, Barrier
24	3348855	Seal, Inner Cap
25	3350829	Agitator Assy
26	3949550	Washer

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

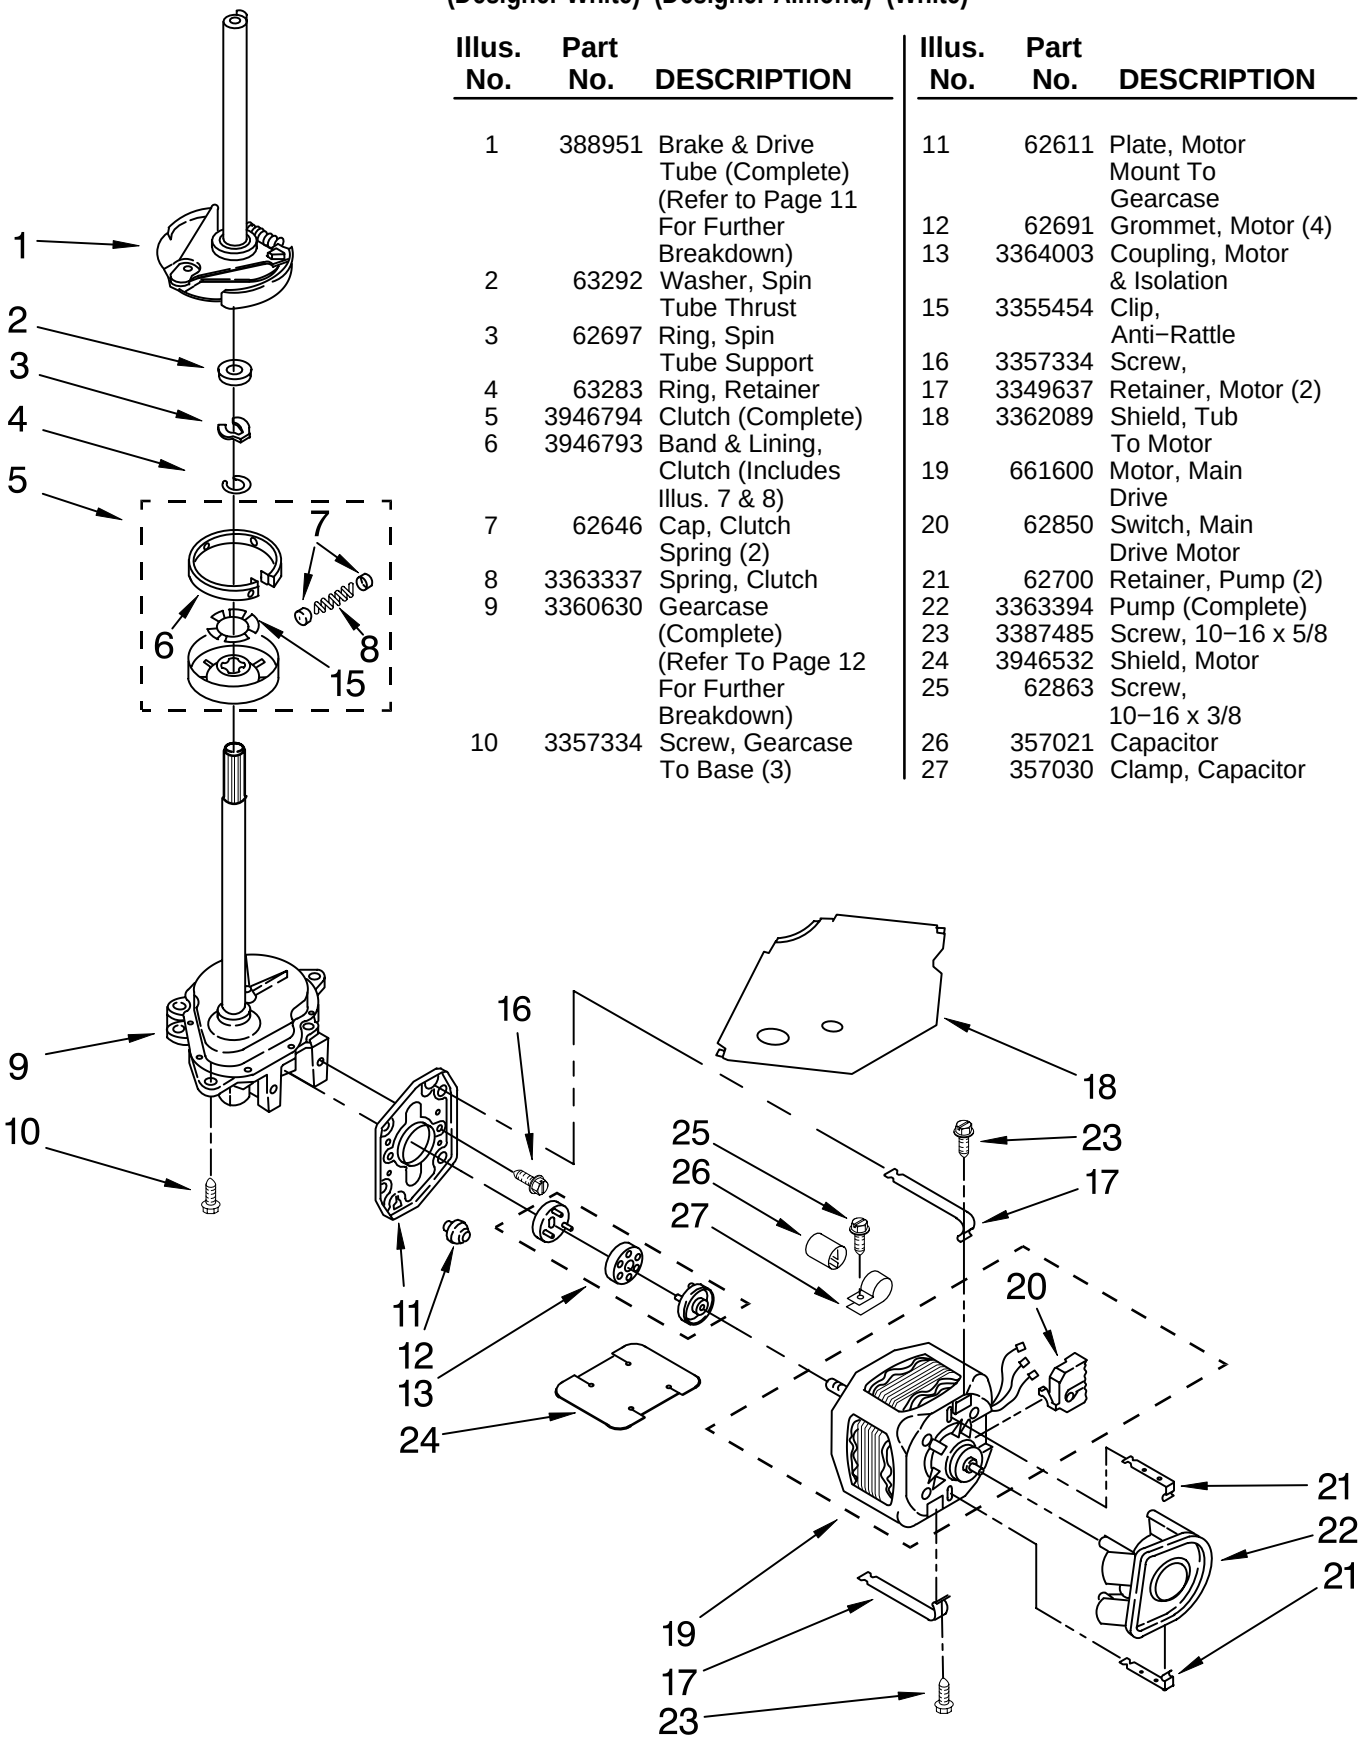

Illus. No.	Part No.	DESCRIPTION
1	388951	Brake & Drive Tube (Complete) (Refer to Page 11 For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3946794	Clutch (Complete)
6	3946793	Band & Lining, Clutch (Includes Illus. 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	3363337	Spring, Clutch
9	3360630	Gearcase (Complete) (Refer To Page 12 For Further Breakdown)
10	3357334	Screw, Gearcase To Base (3)
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	3364003	Coupling, Motor & Isolation
15	3355454	Clip, Anti−Rattle
16	3357334	Screw,
17	3349637	Retainer, Motor (2)
18	3362089	Shield, Tub To Motor
19	661600	Motor, Main Drive
20	62850	Switch, Main Drive Motor
21	62700	Retainer, Pump (2)
22	3363394	Pump (Complete)
23	3387485	Screw, 10−16 x 5/8
24	3946532	Shield, Motor
25	62863	Screw, 10−16 x 3/8
26	357021	Capacitor
27	357030	Clamp, Capacitor

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MACHINE BASE PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

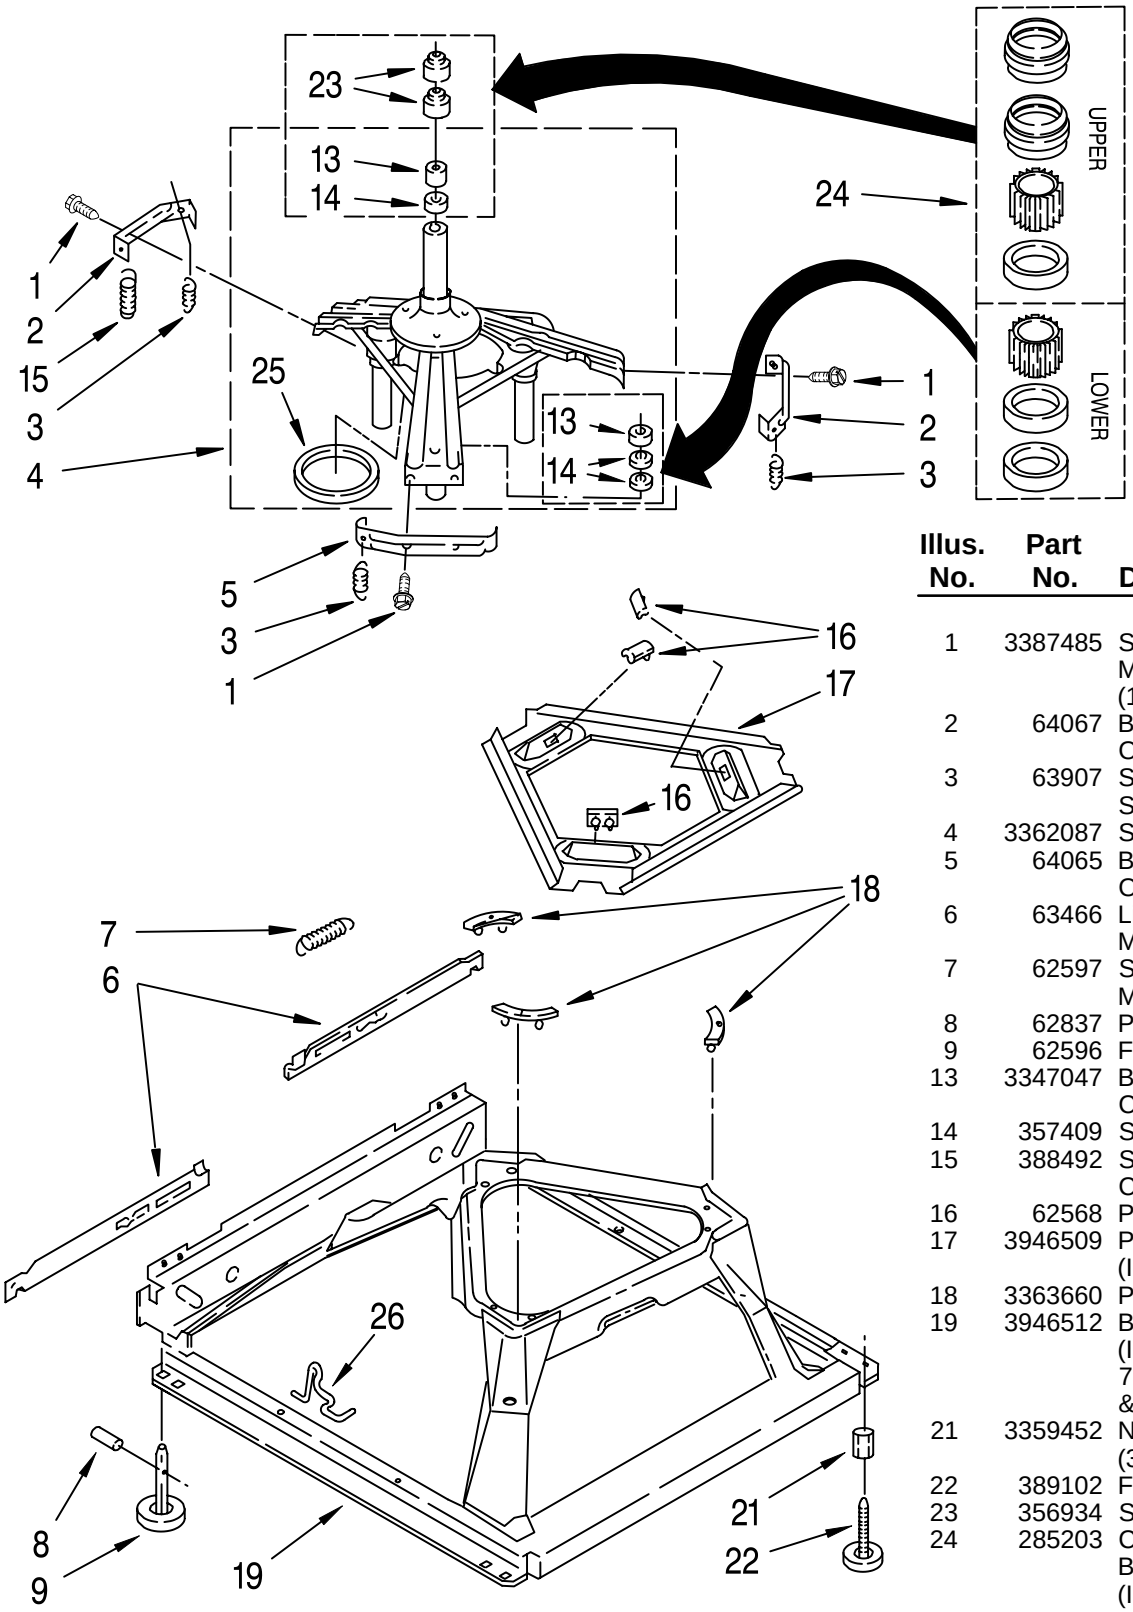

Illus. No.	Part No.	DESCRIPTION
1	3387485	Screw, Bracket Mounting (10−16 x 5/8)
2	64067	Bracket, Spring Outer (2)
3	63907	Spring Suspension,(3)
4	3362087	Support & Brake, Tub
5	64065	Bracket, Spring Outer (L.F.)
6	63466	Link, Leveling Mechanism (2)
7	62597	Spring, Leveling Mechanism
8	62837	Pin, Knurled
9	62596	Foot, Rear (2)
13	3347047	Bearing, Centerpost (2)
14	357409	Seal, Centerpost (3)
15	388492	Spring, Counterweight
16	62568	Pad, Plate
17	3946509	Plate, Suspension (Includes Illus. 16)
18	3363660	Pad, Base
19	3946512	Base Assembly (Includes Illus, 6, 7, 8, 9, 16, 17,18, & 26.)
21	3359452	Nut, Lock (3/8−16)
22	389102	Foot, Front (2)
23	356934	Seal, Centerpost (2)
24	285203	Centerpost Bearing Kit (Includes Illus. 13, 14 & 23)
25	63134	Ring, Sound Deadening
26	63806	Retainer, Suspension Spring

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

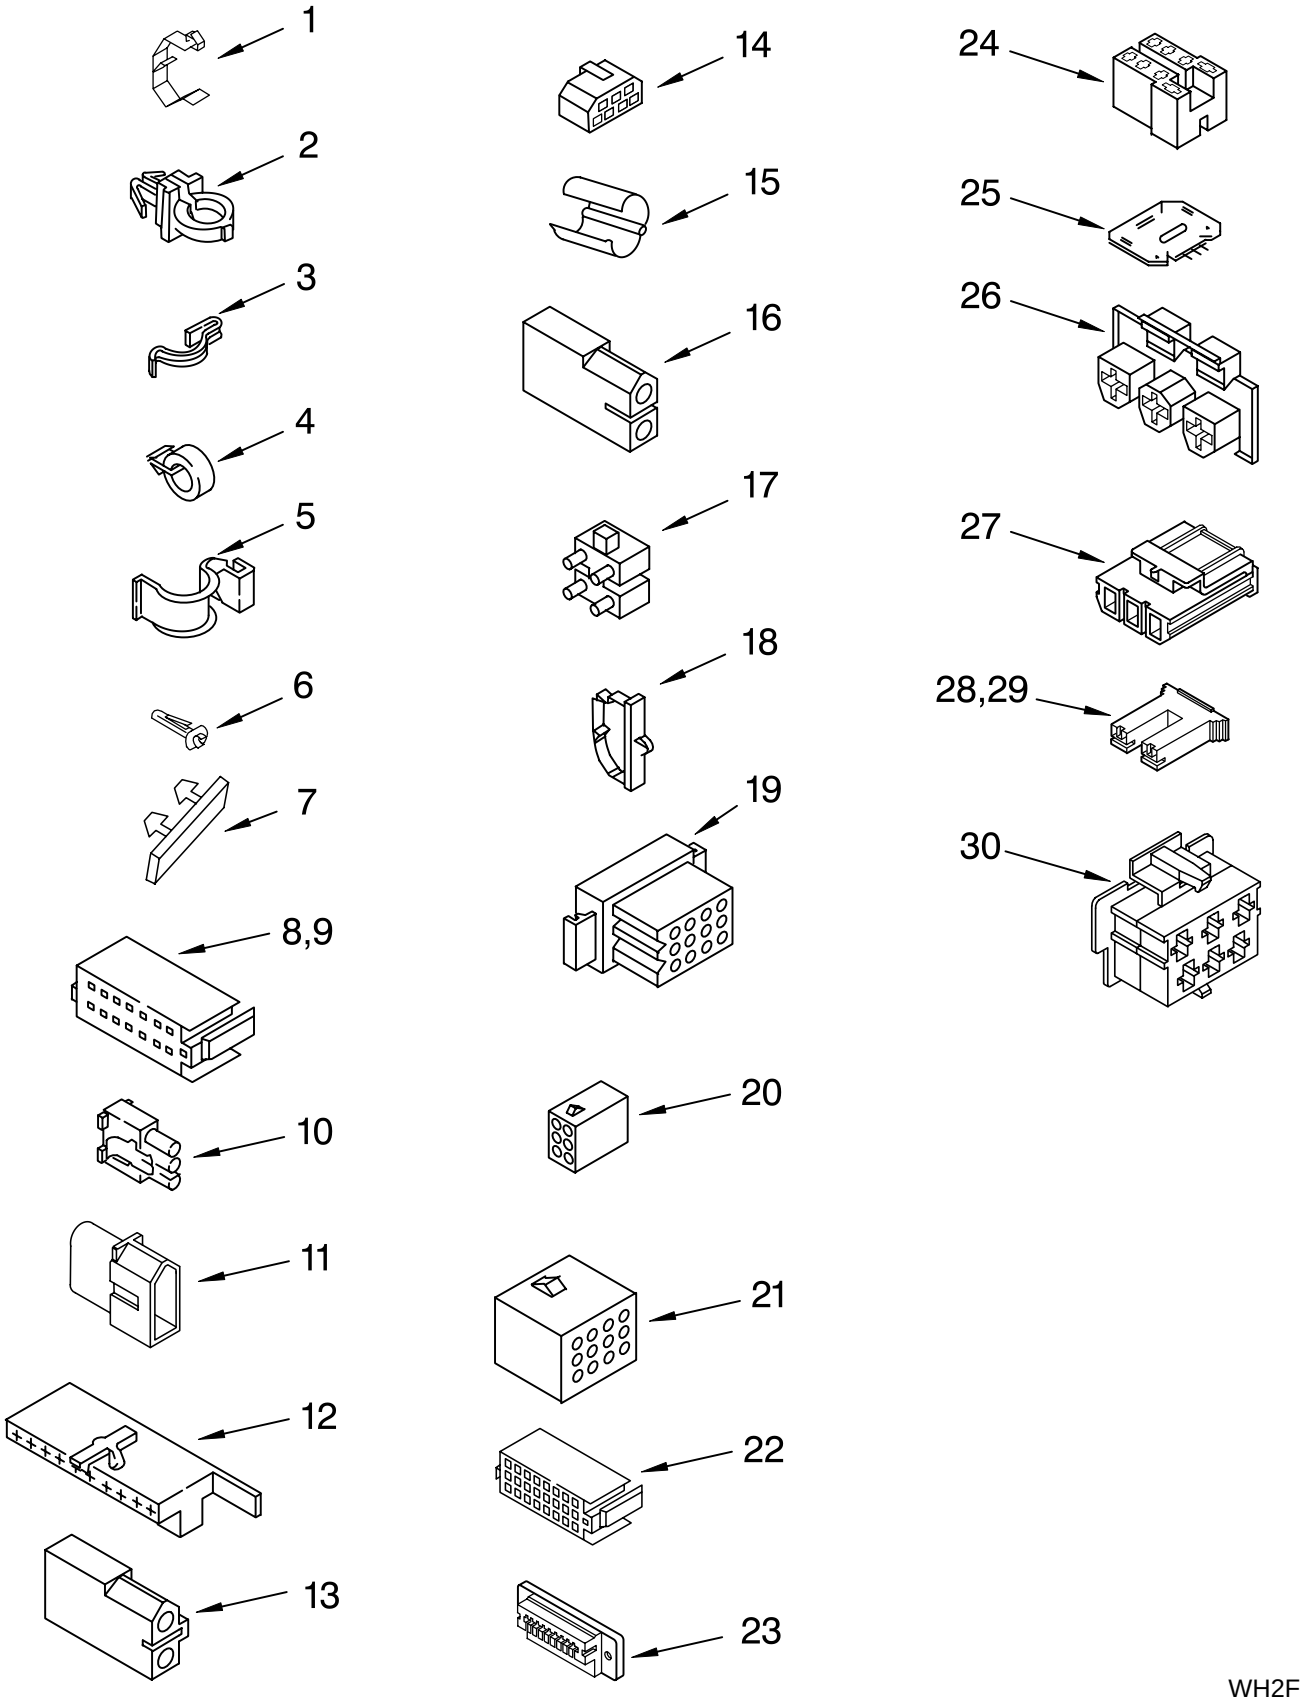

WH2F

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

Illus. No.	Part No.	DESCRIPTION
1	3349557	Clip, Harness
2	388498	Clip, Harness
3	3347812	Clip, Harness
4	3352501	Clip, Harness
5	90016	Clip, Harness
6	3390496	Clip, Harness
7	389379	Retainer, (Suds Models)
8	352090	Timer, Block Disconnect (White)
9	352089	Timer, Block Disconnect (Black)
10	62889	Receptacle, Terminal (3−Way) (Lid Switch) (Use Term.94613) Or 94614.)
11	353424	Plug, Terminal (3−Way) (Power Cord) (Use Term.94613)
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)
13	3348075	Block, Disconnect (Motor 3 Speed) (Use Term. 94613 Or 94614.)
14	3347243	Block, Disconnect (Use Term. 352088)
15	63523	Protector
16	717252	Connector (2−Way) (Use Term.94614)
17	387566	Plug, Terminal (4−Way) (Power Cord) (Use M3 Screws)
18	3352944	Clip, Harness
19	3390423	Block, Disconnect (12−Way) (Timer) (Use Term. 94613)
20	3347730	Receptacle (6−Way) (Use Term. 94613)
21	388818	Plug, Terminal (12−Way) (Use Term. 94613 Or 94614.)
22	3369366	Timer, Block Disconnect (Black) (Amp) (Use Term.3369365)
23	3349494	Connector, Etc
24	60687	Connector, Relay (Use Term.308569 Or 338664.)
25	3407125	E.T.C. Control
26	3948617	Connector (T.P.A.) (3−Circuit) (Lid Switch) (Use Term. 3948619 OR 3948620.)
27	3360056	Connector (T.P.A) (3−Circuit) (Pressure Switch) (Use Term.3948619 OR 3948620.)
28	3354925	Block, Connector (Cold Valve) (Use Term.693217)
29	3354926	Block, Connector (Hot Valve) (Use Term.693217)
30	3948615	Connector (T.P.A.) (6−Circuit) (Temp. Switch) (Use Term.3948619 OR 3948620.)

FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

WH2F

BRAKE AND DRIVE TUBE PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

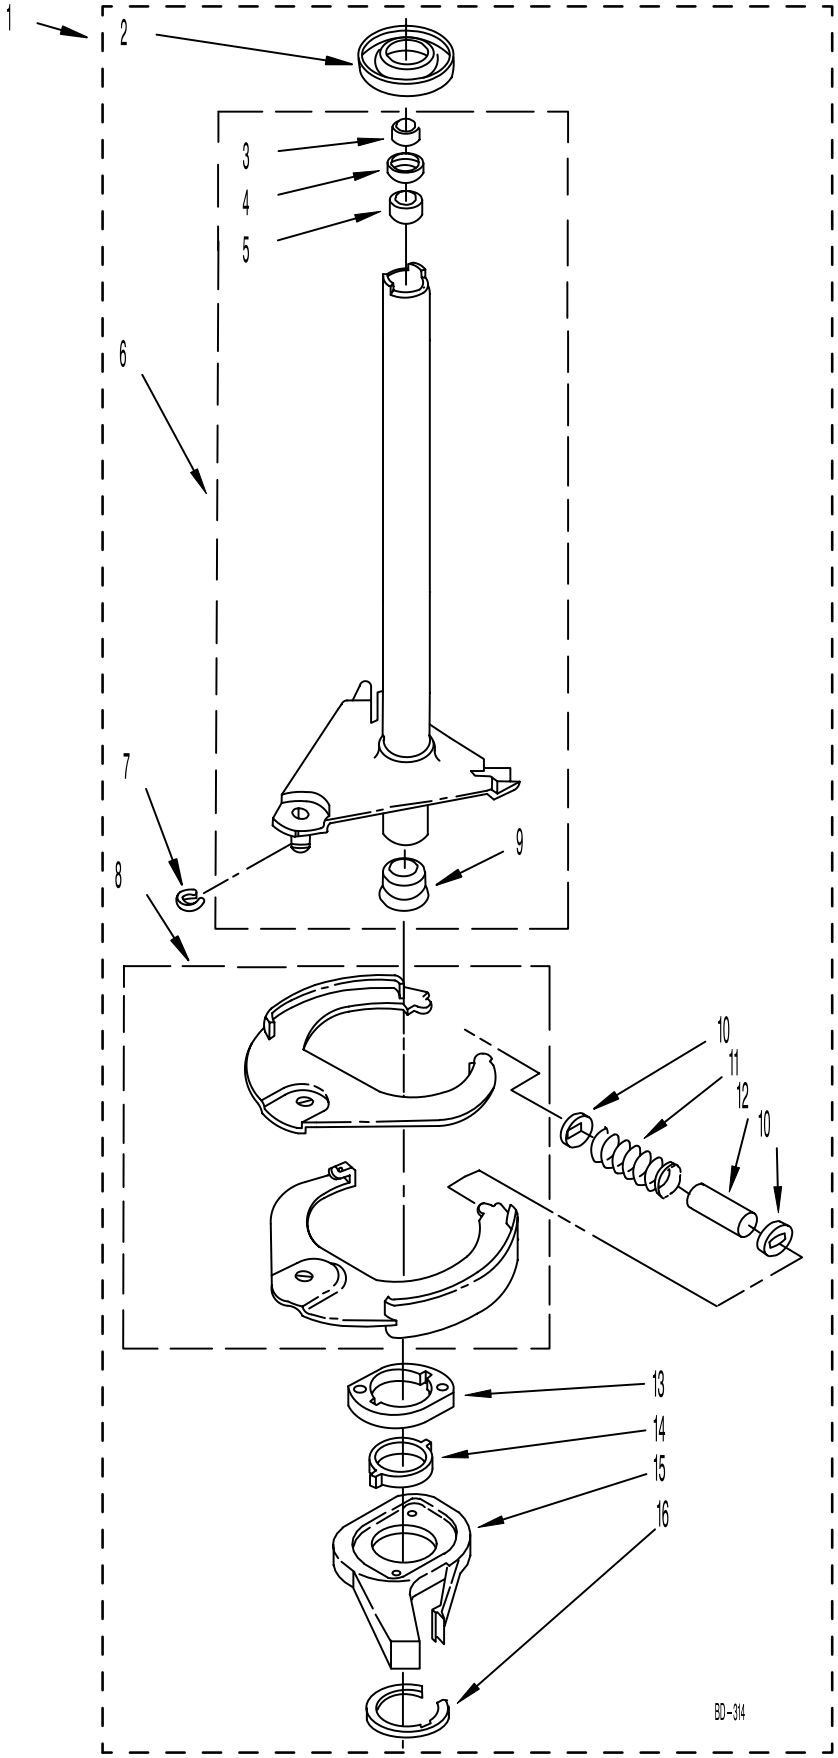

Illus. No.	Part No.	DESCRIPTION
1	388951	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Brake Shoe
9	62703	"T" Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	62647	Spring, Brake
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake Cam
16	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED

	285208	Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

GEARCASE PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

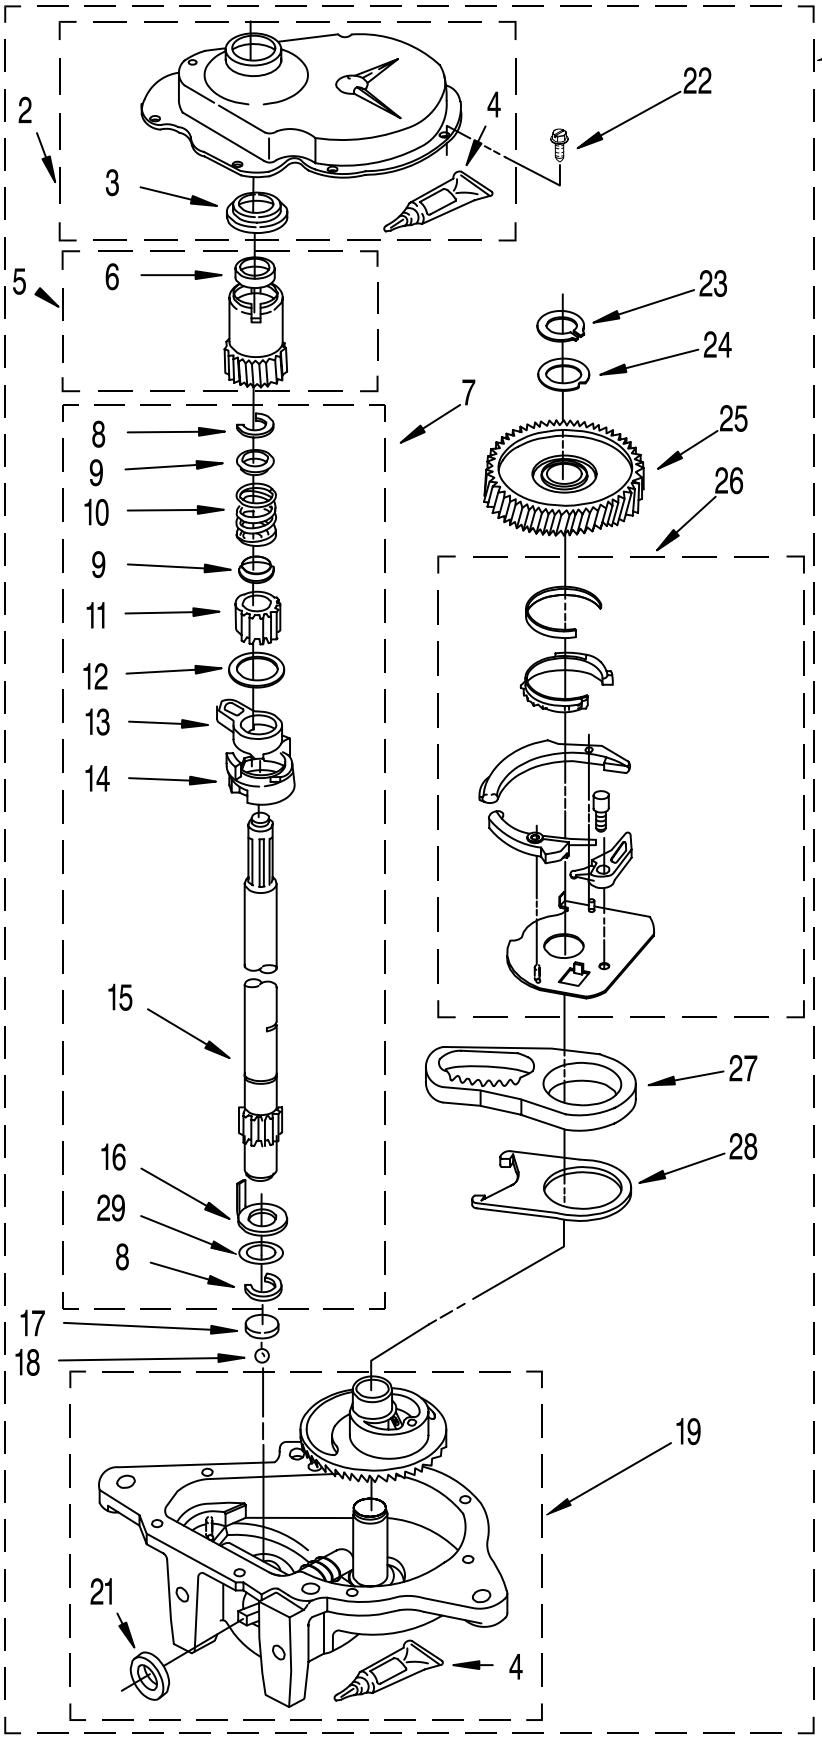

Illus. No.	Part No.	DESCRIPTION
1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10−24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediate

GC−215C

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WATER SYSTEM PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

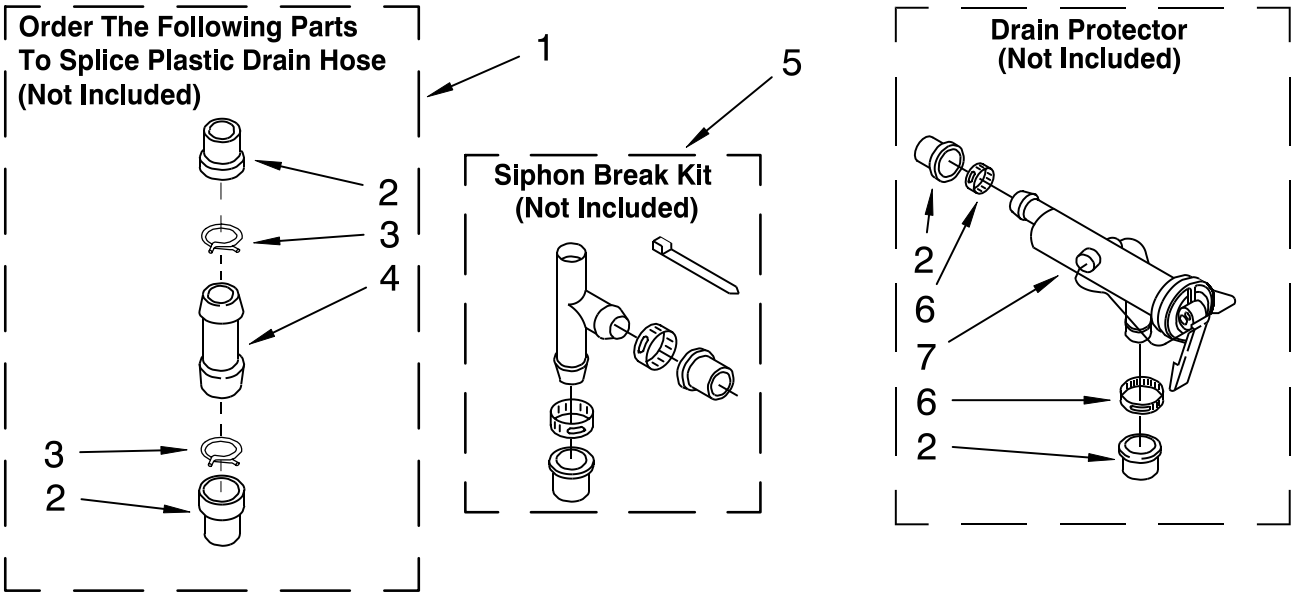

WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

MISCELLANEOUS PARTS

For Models: LXR9245EQ1, LXR9245EZ1 and LXR9245EW1
(Designer White) (Designer Almond) (White)

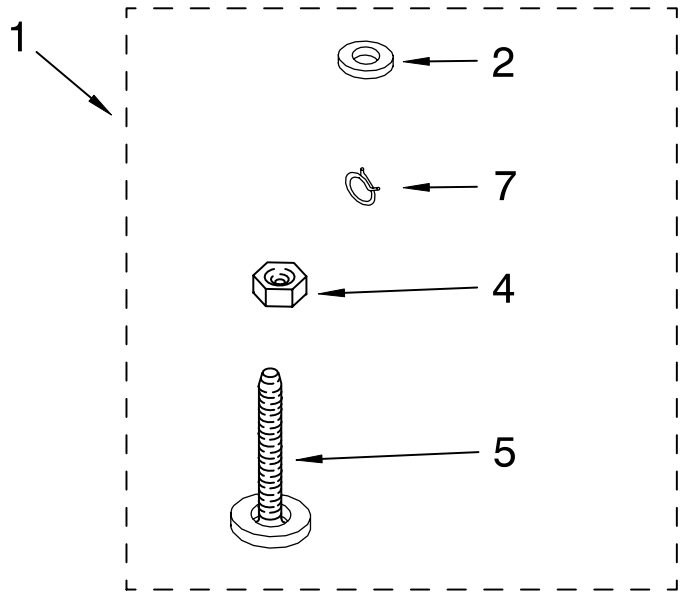

Illus. No.	Part No.	DESCRIPTION
1	3976252	Miscellaneous Parts Bag
2	16123	Washer, Inlet Hose (1−1/16 x 5/8) (4)
4	3359452	Nut, Lock (3/8−16)
5	389102	Foot, Front (2)
7	3366912	Clamp, Hose

LITERATURE AND OPTIONAL PARTS

Illus. No.	Part No.	DESCRIPTION
		LITERATURE PARTS
	LIT3949145	Sheet, Installation Instructions
	LIT3363574	Guide, Use and Care
	LIT3949006	Energy Guide
	LIT3948847	Label, Wiring Diagram
		Following May Be Purchased
		DO−IT−YOURSELF REPAIR MANUALS
	LIT4313896	Manual, (Washer) Do−It−Yourself

Illus. No.	Part No.	DESCRIPTION
		OPTIONAL PARTS NOT INCLUDED
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	72107	Almond
	72110	Golden Harvest
		PAINT, PRESSURIZED SPRAY (13 oz.)
	350938	Primer, Gray
	350930	White
	350956	Almond
	261890	Golden Harvest
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
	978883	Almond (Uncut)
	261891	Golden Harvest (Uncut)
		OIL
	350572	Oil, Gearcase (16 Oz.)

Illus. No.	Part No.	DESCRIPTION
		LUBRICANT
	285208	Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)
		SEALER
	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
		SHIPPING KIT
	3348675	Shipping Kit
		ACCESSORY PARTS
	63580	Fabric Dispenser
	89121	Stand−Pipe Kit
	367031	Drain Protector
	285320	Siphon Break Kit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST